

Amusement Rides



Kids Seesaw

Kids Seesaw

Once accessed to the electricity and put one-dollar coin, the controller would begin to count and the machine would shake from the front to the back and up and down. Meanwhile, it broadcasts nursery songs (the tape is changeable). It also can send out eight kinds of different sounds if you push the button and automatically stop when time is up (it can be adjusted from one to five minutes). If you want to move, just lift the machine by the front, then the two back wheels can be easily moved.